



LED Undercabinet

Cat# 71251A/71252A/71260A/71264A

SAFETY INSTRUCTIONS

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND SAVE THEM FOR FUTURE REFERENCE.

1. Read all safety precautions and installation instructions carefully before installing or servicing this fixture. Failure to comply with these instructions could result in potentially fatal electric shock and/or property damage.
2. This fixture must be wired by only a qualified electrician in accordance with national and local electrical codes.
3. **WARNING:** Do not handle any plugged in fixture or attempt to handle any fixture with wet hands or while standing on a wet or damp surface.
4. **WARNING:** To reduce the risk of electrical shock and to assure proper operation, this fixture must be grounded properly. To accomplish proper grounding, there must be a separate ground wire (green) contact between this fixture and the ground connection of your main power supply panel.
5. **CAUTION:** Make sure that the power source conforms to the requirements of the fixture (see labels on fixture housing). This fixture is designed for use in a 110-120 VAC, 60Hz.
6. **CAUTION:** Make sure power is off at fuse or circuit breaker box. Check wires for damage or scrapes. If power supply wires are within three inches of the LED driver power supply, use wire suitable for at least 90°C (194°F).
7. This fixture is intended to be used for general indoor lighting in dry locations only.
8. Any modifications to this fixture may void the warranty and interfere with the safe operation of the luminaire.
9. Do not link more than 10 fixtures together.

REQUIRED TOOLS

- Flat Blade Screwdriver
- Phillips Screwdriver
- Drill
- Drill Bits
- Pliers
- Wire Cutter
- Wire Stripper
- Hammer

AA



Hardwire Connector
x1

BB



Mounting Screws
x2

CC

 
 


Wire Nuts
x3

INSTRUCTIONS

Disconnect electrical power at fuse or circuit breaker box before installing or servicing any part of this fixture. Carefully remove the fixture from the carton, and check that all parts are included.

1. Carefully remove diffuser(A) by squeezing rounded back edge with forefingers while holding front side with thumbs.
2. Remove channel cover (C) from channel (B) by squeezing the cover till it releases from channel body tabs. Remove the parts bag.
Note: Fixture is provided with knockouts for use with hardwire connector strain relief (included).

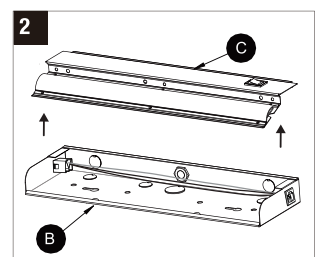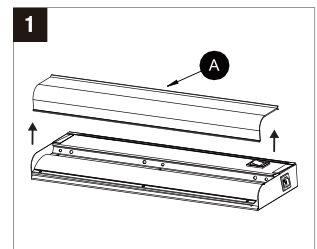

3. Determine appropriate knockout for removal in relationship to incoming power supply. To remove knockout, place standard screwdriver on edge of circle and gently strike with hammer until it releases. Grip edge with pliers and flex back and forth till knockout is removed.

4. If using hardwire connector (AA) assemble connector end cap to body using 2 mounting screws (BB).

Leave screws loose to accommodate installation of power supply wires. Position hex nut inside channel over hole from knockout and thread connector assembly into nut until snug and screw heads are facing downward.

5. Position channel body (B) in desired mounting location and mark center point in small location of keyhole slot. Drill pilot hole at marked locations. Screw in mounting screws (BB) leaving space for channel body. Slide channel (B) over mounting screws. Lift and shift channel into position and tighten screws.

WIRING:

Note: All wiring must be made inside channel body and cover.

CAUTION: Make sure power is off at fuse or circuit breaker box. Check wires for damage or scrapes. If power supply wires are within three inches of the LED driver power supply, use wire suitable for at least 90°C (194° F).

6. Insert power supply wires through hardwire connector and tighten screws to secure. Using a wire stripper, strip 3/8" from black and white wire leads.

Use wire nuts (CC) to connect white wire to neutral supply wire, black wire to black supply wire and green to ground supply wire. Tuck all wire neatly under channel cover. Install channel cover (C) back onto channel (B) and secure by snapping under channel body tabs.

 
 
 
 
 
Re-install diffuser (A) onto channel body front lip and push to lock back flange onto channel cover.

Restore power at fuse or circuit breaker box.

7. Color (CCT) Option switch: To choose between 3000k (warm) and 4000K (Cool) light color, locate switch opposite On/Off power switch.

Select warm (WW) or cool (CW) from the markings on the switch and press to select.

Outlet: Rated for 120V, 15 AMP MAX.

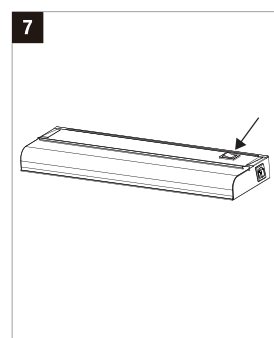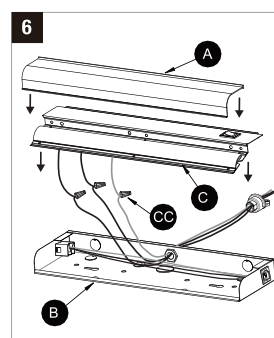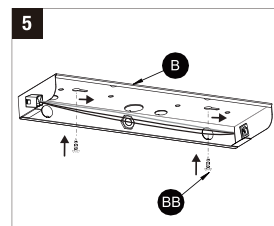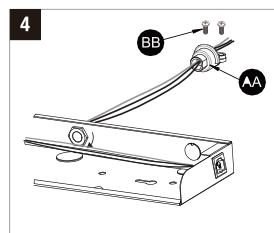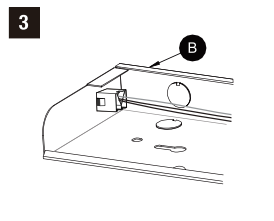

ASSEMBLY INSTRUCTIONS

1. THE LIGHT DOES NOT TURN ON:

- Make sure the wall switch and circuit breaker are on.
- Make sure the fixture is wired properly.

2. FUSE BLOWS OR CIRCUIT TRIPS WHEN LIGHT IS TURNED ON:

- Check for crossed wires, ensure fixture is wired properly.

If unable to fix any of the above issues, please consult a certified electrician or your distributor.